
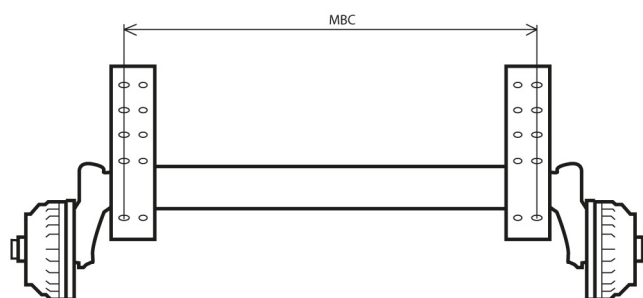




HOW TO MEASURE AN AXLE

Axle measurements needed are the face to face, mounting bracket centres and the PCD. For the PCD please see our how to on calculating the PCD included in the how to section of www.sbstrailers.co.uk.

Long Bracket Axle

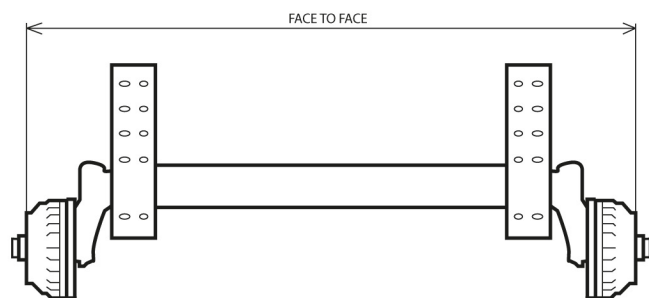

Short Bracket Axle

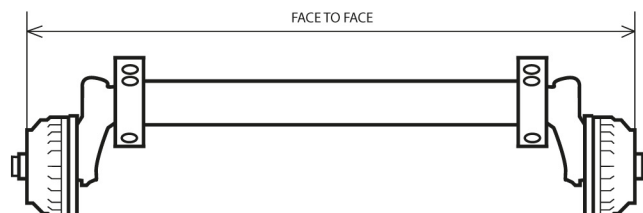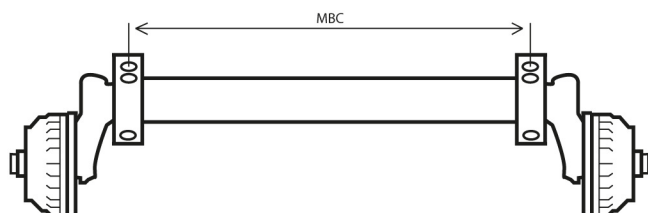

Load capacity

The load rating of an axle must match that of the maximum gross weight. For twin axle you must calculate the maximum gross weight and divide it by two to gather the minimum load rating.

Explained

Firstly identify which type of axle you have. For short bracket axles they attach to the mudguard bracket then to the chasis. For ling bracket axles the fix straight to the chasis of the trailer. Once identified measure the distance between the MBC which is the mounting bracket centres. Then measure the face to face. These will give you all the measurements we need to find the right axle.

For more information on this visit www.sbstrailers.co.uk